



3.x, 95, 98, Me, 2000, XP, NTx Compatible

## **1. DRIVER INSTALLATION :**

Install **EPSON LX-800** driver respecting Windows instructions (Version xxxx-**Wx**).

KyoLine Printer (Version xxxx-**kx**) don't work in graphic mode, if you need to print text use driver **GENERIC text only**.

## **2. PRINTING CONFIGURATION :**

Paper format : **A4**

Graphics :

- Resolution : **240 x 144**

- Plotting : **ERRORS DIFFUSION**

Peripheral Options :

- Printing quality : **NLQ**

## **3. PRINTER CONFIGURATION :**

Switches 1 to 4 : according to your configuration.

Switch 7 : **ON** (Condensed printing mode)

All trade marks mentioned are property of the respective depositaries.

**Kyosha** INDUSTRIES

11 rue Parmentier - 95870 BEZONS - FRANCE - Tél. : 33 (0)1.30.76.96.00 - Fax : 33 (0)1.30.76.42.70  
E-Mail : [info@kyosha.net](mailto:info@kyosha.net) - Web : <http://www.kyosha.net>